

ColorChlor Troubleshooting Guide

Problem	Possible Causes	Corrective Action
Blinking Red Light	Salt very low	Add salt
	Plates need cleaning	Soak ColorChlor cell in Vinegar for 10 minutes
Chlorine consistently too low	Power level too low	Increase the power level
	Plates need cleaning	Soak ColorChlor cell in Vinegar for 10 minutes
	Low salt level	Adjust the level if necessary
	Large bather load	Additional chlorine may be needed/use light show option or remove from water and replace to activate boost mode after use
	Phosphates in water	Check phosphate level and add phosphate remover if necessary
Chlorine consistently too high	Power level too high	Lower the power level